

# Rebooting Yealink Phones

## How to Reboot Yealink Phones

1. Press and hold the "X" button on your Yealink phone for 5-10 seconds:
2. A message on the screen will display, "Reboot the Phone?" Select OK, and the phone will reboot.

- How to Reboot Yealink Phones

# How to Reboot Yealink Phones

[How to Reboot Yealink Phones.pdf](#)