

# Yealink® SIP T43U

# Quick Start Guide

Please note the following:

1-You no longer need to dial 9 first before making an outside call.

2 -The default first time voicemail passcode is 001122. A tutorial will guide you in setting up your voicemail.

- [User Guide Yealink T43U Quick Start](#)

# User Guide Yealink T43U

## Quick Start

[User Guide Yealink T43U Quick Start.pdf](#)