

# Yealink® SIP T46U

# Quick Start Guide

Please note the following:

1-You no longer need to dial 9 first before making an outside call.

2 -The default first time voicemail passcode is 001122. A tutorial will guide you in setting up your voicemail.

- [Yealink® SIP T46U Quick Start Guide](#)

# Yealink® SIP T46U Quick Start Guide

[User Guide Yealink-T46U-Quick Start.pdf](#)